


SPECTROLINE® **ACID-BUSTER™**

ACID SCAVENGING SOLUTION

Eliminates Acid Build-Up in AC&R Systems!

- Prevents compressor burnout!
- Twice as concentrated as competitive brands
- Works with all refrigerants and lubricants (mineral oil, polyol ester and alkyl benzene)
- Compatible with semi-hermetic and hermetic compressors
- Direct, reusable injector systems eliminate the need for an oil pump
- Easy-to-use cartridges are prefilled and disposable

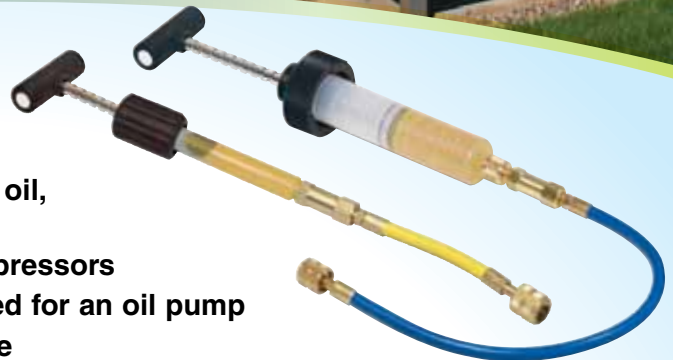

FAST AND EASY

ACID-BUSTER is a ready-to-use acid scavenging solution that can be injected directly into an air-conditioning or refrigeration system. Simply connect the injector hose to the system's low-side service port and turn the handle to inject the *exact* amount of *ACID-BUSTER* required.

ECONOMICAL

Using *ACID-BUSTER* is the most cost-effective way to clean up acid build-up in any AC&R system. Only 1/2 oz of super-concentrated *ACID-BUSTER* is needed to treat one quart of system oil, *half as much as* competitive brands.

SAFE

Can be used with all AC&R systems, including high-pressure R-410A systems. Won't contaminate the refrigerant or lubricant or leave behind a residue of corrosive salts. *ACID-BUSTER* is designed for use in CFC, HCFC and HFC refrigerants using mineral oil, polyol ester and alkyl benzene lubricants.

PROTECTS AGAINST OVERDOSING

Using an injector and a graduated cartridge lets you introduce the *precise* amount of *ACID-BUSTER* into the system. This helps preserve the integrity of the lubricant. Competitive products can damage lubricant properties because they require that the *entire* bottle of acid treatment be used, even when only a small portion is needed.

PERFECT FOR PREVENTIVE MAINTENANCE

Standard maintenance procedures for acid build-up problems require performing frequent oil changes to dilute acids or require flushing the entire system periodically to remove acids. *ACID-BUSTER* eliminates these expensive and time-consuming methods since it is specially formulated to remain safely in the system.

AVAILABLE IN:



AB-100CS EZ-Ject™ Injection Kit

Includes EZ-Ject™ injector, hose assembly with check valve and 1/4" flare low-loss fitting and (2) AB-5CS 0.5 oz (14.8 ml) EZ-Ject™ cartridges filled with *ACID-BUSTER* acid scavenging solution.



AB-400CS BigEZ™ Injection Kit

Includes BigEZ™ injector, hose assembly with check valve and 1/4" flare low-loss fitting and (1) AB-4CS 4 oz (118 ml) BigEZ™ cartridge filled with *ACID-BUSTER* acid scavenging solution.

Replacement *ACID-BUSTER* Cartridges

- AB-5CS EZ-Ject™ 0.5 oz (14.8 ml) cartridge
- AB-4CS BigEZ™ 4 oz (118 ml) cartridge
- AB-8 BigEZ™ 8 oz (237 ml) cartridge

DOSAGE: Use 0.5 oz (14.8 ml) of *ACID-BUSTER* acid scavenging solution for every 1 qt (946 ml) of oil, 3 lbs of refrigerant or 1.5 tons of cooling

**SPECTRONICS
CORPORATION**
956 Brush Hollow Road, P.O. Box 483
Westbury, New York 11590
800-274-8888 • 516-333-4840
Fax: 800-491-6868 • 516-333-4859
www.spectroline.com

DISTRIBUTED BY: